




GPS Mode

1. Turn the ignition switch ON (1).
2. Use the GPS/WP button (1) to select the GPS mode (page 66).
3. To select a higher waypoint number (2), press and release the plus button (3).
To select a lower waypoint number, press and release the minus button (4).
To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.
4. Press and hold the GPS/WP button for about 2 seconds, until the waypoint number and waypoint distance (5) flash. Then release the button.
5. While the display is still blinking, press and hold the GPS/WP button again for about 2 seconds until LAT appears above the WP mark. The compass direction indicator will flash Northern Latitude (6) or Southern Latitude (7), indicating the hemisphere. (To switch to the other hemisphere, press either the plus or minus button.)
6. Tap (do not hold) the GPS/WP button. The degree (8) will begin flashing.

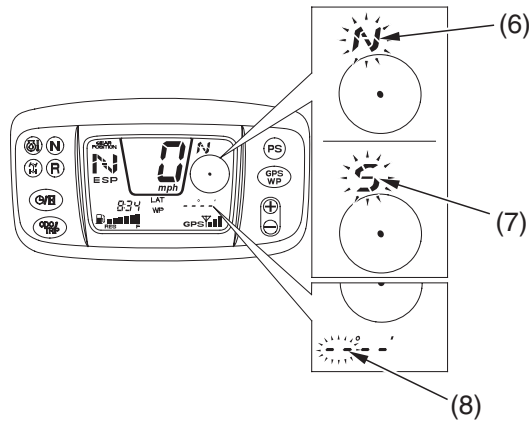

(6) Northern Latitude
 (7) Southern Latitude

(8) degree

