



# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
DRIVESHAFT BOOTS						165	
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)		123, 125	
* BRAKE FLUID	NOTE 3					145	
* BRAKE SHOES WEAR	NOTE 1					154	
* BRAKE PADS WEAR	NOTE 1, 2					148	
* BRAKELIGHT SWITCH						155	
BRAKE SYSTEM						145	
* REVERSE LOCK SYSTEM						137	
SKID PLATES, ENGINE GUARD						164	
* CLUTCH SYSTEM						136	
* SUSPENSION						—	
* SPARK ARRESTER				C	C	143	
* NUTS, BOLTS, FASTENERS						—	
** WHEELS/TIRES						157	
** TIE-ROD AND JOINT BOOTS						—	
** STEERING SHAFT HOLDER BEARINGS						—	
** STEERING SYSTEM						—	

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.