



Tool Kit


The tool kit (1) and the gear change tool (2) are stored under the seat (page 110).

After using the tools, be sure to use the rubber band (3) to fasten the tool kit securely.

The air pressure gauge should be stored in the tool kit.

An optional, larger tool kit may be available. Check with your Honda dealer's parts department.

UNDER SEAT

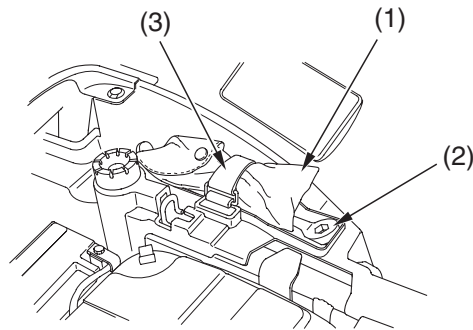

(1) tool kit
(2) gear change tool

(3) rubber band

