

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 93 .

Your ATV's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

NOTICE


Using the wrong oil filter may result in leaks or premature engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 178). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. With the ATV on the level ground, remove the left engine sub cover (page 111) and the oil filler cap/dipstick from the rear crankcase.
2. Place an oil drain pan under the crankcase and remove the engine oil drain plug (1) and sealing washer (2).

UNDER ENGINE

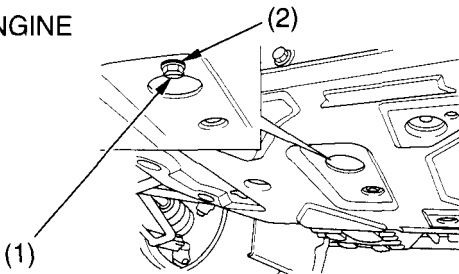

(1) engine oil drain plug

(2) sealing washer