



## Is Your ATV Ready to Ride?

---

*Tires* Use a gauge to check the air pressure. Adjust if needed. Also look for signs of damage or excessive wear (page 156).

*Driveshaft Boots* Check for damage (page 161).

*Nuts & Bolts* Check the wheels to see that the axle nuts are tightened. Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight.

*Underbody & Exhaust System* Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle.



*Air Cleaner Housing Drain Tube* Check for deposits in the drain tube. If necessary, clean the tube (page 128) and check the air cleaner housing.



*Leaks, Loose Parts* Walk around your ATV and look for anything that appears unusual, such as a leak or loose cable.

*Cable* Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as needed.

*Lights* Make sure the headlight, brakelight and taillight are working properly.

If you are carrying cargo, also check the following:

*Loading Limits* Make sure you do not exceed the load limits (page 55).

### 52 Before Riding

