

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 200).

For information about carburetor adjustment for riding at high altitude, see page 201.

Safe Riding Precautions	57
Off-Road Use Only	57
Keep Hands and Feet on Controls	58
Control Speed	59
Use Care on Unfamiliar or Rough Terrain	60
Do Not Perform Stunts	61
Starting & Stopping the Engine	62
Preparation	62
Starting Procedure	63
Flooded Engine	65
Stalled Engine	65
How to Stop the Engine	66
Using the Recoil Starter	67
Shifting Gears	68
Riding in Reverse	70

(cont'd)