


# Gear Case Oil

---

1. Park the ATV on level ground.
2. Place an oil drain pan under the oil drain plug ( 1 ).
3. Remove the oil filler cap ( 2 ), drain plug and sealing washer ( 3 ).
4. After the oil has completely drained, reinstall the drain plug with a new sealing washer and tighten it to the specified torque:  
**12 N·m ( 1.2 kgf·m , 9 lbf·ft )**
5. Fill the gear case with the recommended oil.  
**75 cm<sup>3</sup> ( 2.5 US oz , 2.6 Imp oz )**
6. Remove the oil level check bolt ( 4 ) and sealing washer. Make sure the oil level reaches the oil level check hole ( 5 ).
7. Install the oil filler cap and oil level check bolt with a new sealing washer.

## REAR

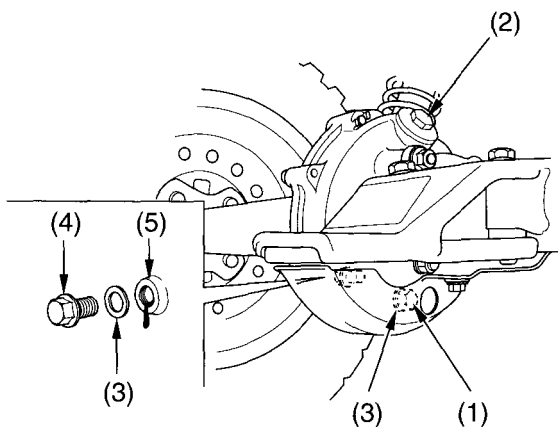

- (1) oil drain plug
- (2) oil filler cap
- (3) sealing washer

- (4) oil level check bolt
- (5) oil level check hole