

Indicators & Displays

1	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check</i>
2	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check</i>
3	Oil/coolant high temperature indicator	Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine. If the oil/coolant high temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 196. <i>Lamp Check</i>
4	4WD indicator	Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your Honda dealer as soon as possible. <i>Lamp Check</i> .
5	Hourmeter/digital clock select button	Selects display of the hourmeter or digital clock (pages 23 , 24).
6	Hour select button	Advances the hour displayed by the digital clock (page 24).
7	Minute select button	Advances the minutes displayed by the digital clock (page 24).