


# Starting & Stopping the Engine

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your ATV's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

## Preparation

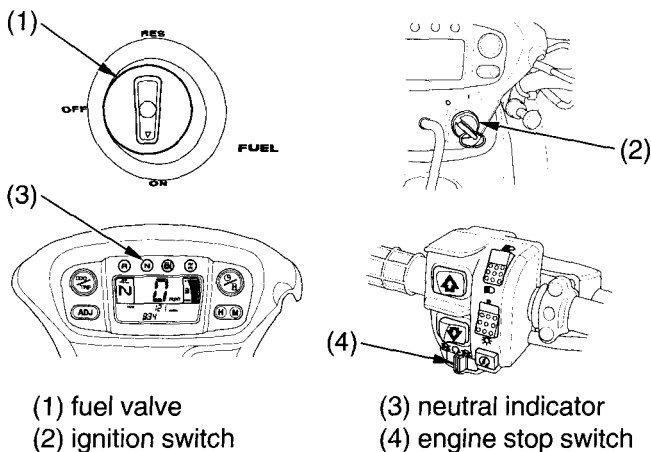

1. Before starting, select a level surface and lock the parking brake (page 37).
2. Turn the fuel valve (1) and ignition switch (2) to ON ( I ).

Confirm the following:

- The transmission is in NEUTRAL (neutral indicator (3) light ON).
- The engine stop switch (4) is set to RUN ( O ).

The oil/coolant high temperature indicator should go off a few seconds after the engine starts.