

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			HOURS	20	100	200	
NON EMISSION RELATED ITEMS		DRIVE SHAFT BOOTS					163
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(REVERY 2 YEARS)		120 122
	*	BRAKE FLUID	NOTE 3				144
	*	BRAKE SHOES WEAR	NOTE 1				147
	*	BRAKE PADS WEAR	NOTE 1,2				153
		BRAKE SYSTEM					144
		SKID PLATE, ENGINE GUARD					162
	*	SUSPENSION					-
	*	SPARK ARRESTER			C	C	142
	*	NUTS, BOLTS, FASTENERS					-
	**	WHEELS/TIRES					-
	**	STEERING SHAFT HOLDER BEARINGS					-
	**	STEERING SYSTEM					-

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 220).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.