

Indicators & Displays

1	Odometer/tripmeter select button	Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 23).
2	Hourmeter/digital clock select button	Selects display of the hourmeter or digital clock (pages 24 , 25).
3	Reverse indicator	Lights when the transmission is in reverse.
4	4WD indicator	Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your Honda dealer as soon as possible.
5	Oil/coolant high temperature indicator	Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine. If the oil/coolant high temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 229. <i>Lamp check</i>
6	Neutral indicator	Lights when the transmission is in neutral.