

Starting & Stopping the Engine

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Leave the engine stop switch set to RUN (\odot).
2. Push the choke knob down all the way to fully OFF.
3. Open the throttle fully.
4. Press the start button for 5 seconds (or operate the recoil starter several times).
5. If the engine starts, quickly close the throttle, then open it slightly if idling is unstable.

If the engine does not start, wait 10 seconds, then follow the *High Air Temperature* procedure (page 98).

If the engine still won't start, refer to *If Your Engine Quits or Won't Start*, page 220 .

Stalled Engine

If the engine stalls, shift into Neutral (N) and restart the engine.

If you are unable to shift to Neutral (N) from Drive (D), you can restart the engine by squeezing the front brake lever and pressing the starter button while the vehicle is stopped.

Do not press the throttle while starting in gear. Your ATV is equipped with a start inhibitor system that will cut off the ignition if the throttle is open while attempting to start in gear.

Once you have started the engine, release the front brake lever, then apply throttle gradually.