


# If a Fuse Blows

---

## Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF ( O ) before checking or replacing the fuses.
2. Remove the seat (page 140 ).
3. To access the main fuse (2) (3), remove the fuse box cover (4).

## UNDER SEAT

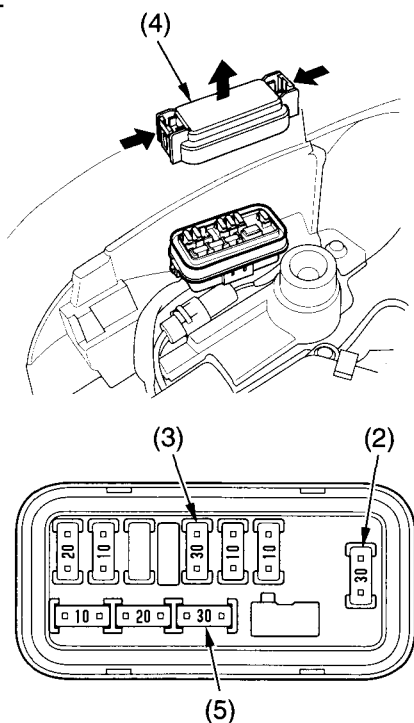

(2) main fuse 1  
(3) main fuse 2

(4) fuse box cover  
(5) spare main fuse

4. Pull the main fuse out.  
If it is blown, install the spare main fuse (5).