 




Is Your ATV Ready to Ride?

- | | |
|--|--|
| <i>Fuel</i> | Check the level and add fuel (page 112) if needed. Also make sure the fuel fill cap is securely fastened.
Check for leaks. |
| <i>Tyres</i> | Use a gauge to check the air pressure. Adjust if needed. Also look for signs of damage or excessive wear (page 157). |
| <i>Driveshaft Boots</i> | Check for damage (page 160). |
| <i>Nuts & Bolts</i> | Check the wheels to see that the axle nuts are tightened. Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight. |
|  <i>Underbody & Exhaust System</i> | Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle. |
| <i>Air Cleaner Housing Drain Tube</i> | Check for deposits in the drain tube. If necessary, clean the tube (page 135) and check the air cleaner housing. |
| <i>Leaks, Loose Parts</i> | Walk around your ATV and look for anything that appears unusual, such as a leak or loose cable. |
| <i>Cable</i> | Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as needed. |
| <i>Lights</i> | Make sure the headlight, brakelight and taillight are working properly. |

50 Before Riding

