



# Coolant

## Coolant Replacement

Refer to *Safety Precautions* on page 99.

Coolant should be replaced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

### **WARNING**

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.



To properly dispose of drained coolant, refer to *You & the Environment*, page 180 .

### **NOTICE**

*Improper disposal of drained fluids is harmful to the environment.*

