

# Indicators & Displays

## Fuel Gauge


The fuel gauge liquid crystal display (1) shows the approximate fuel supply available. The fuel tank capacity is:

4.44 US gal (16.8 ℓ)


When segment E (2) and low fuel indicator (3) flash, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:

1.40 US gal (5.3 ℓ)

TRX680FA

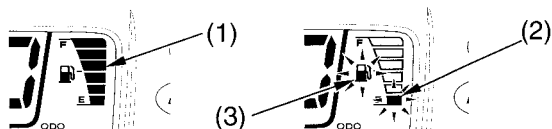

TRX680FGA

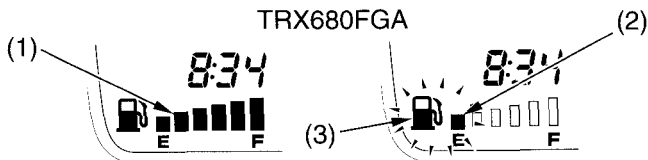


(1) fuel gauge  
(2) segment E

(3) low fuel indicator

All segments will flash, when the fuel gauge function is fails. See your Honda dealer.

TRX680FA

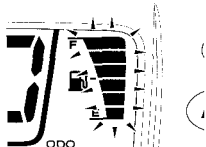

TRX680FGA

