



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT. MAINT. INTERVAL			Refer to page	
			km	150	1000		2000
			mi	100	600		1200
			HOURS	20	100		200
* FUEL LINE				I	—		
* THROTTLE OPERATION				I	113		
AIR CLEANER	NOTE 1			C	C	108	
AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	112	
SPARK PLUG				I	I	119	
* VALVE CLEARANCE			I	I	I	122	
ENGINE OIL			INITIAL= 150 km (100 mi), 20 operating hours or 1 month : R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months : R			92	
ENGINE OIL FILTER			R	R	R	98	
* ENGINE OIL STRAINER SCREEN IN OIL TANK					C	—	
RADIATOR COOLANT	NOTE 3			I	I	102	
* COOLING SYSTEM	NOTE 2			I	I	106	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

