




Engine Oil & Filter

Drain the Engine Oil:

1. With the ATV on level ground, start the engine and let it idle for 3–5 minutes.
2. Stop the engine.
3. Place an oil drain pan under the oil tank and crankcase.
4. Remove the oil filler cap/dipstick, the engine oil drain bolt (oil tank) (1) and sealing washer A (2) on the oil tank.


RIGHT SIDE

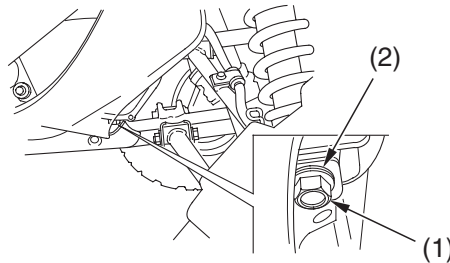

- (1) engine oil drain bolt (oil tank)
- (2) sealing washer A

5. Remove the engine oil drain bolt (crankcase) (3) and sealing washer B (4) on the crankcase.

LEFT SIDE

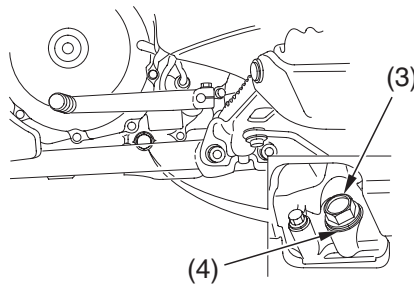

- (3) engine oil drain bolt (crankcase)
- (4) sealing washer B