




## Guards

### Engine Guard & Rear Guards & Front Skid Plate

Refer to *Safety Precautions* on page 77.

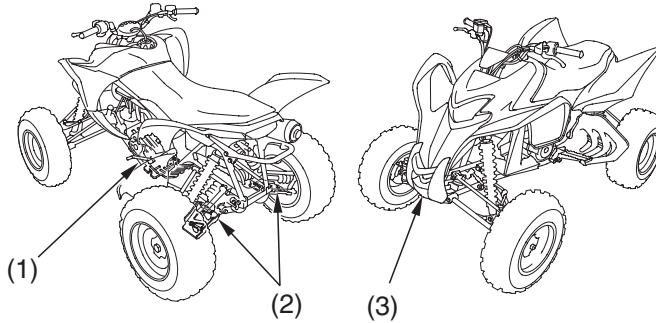

(1) engine guard  
(2) rear guards

(3) front skid plate  
(front carry pipe)

The engine guard (1) protects the frame and engine crankcase.  
The rear guards (2) protect the rear lower arm and driveshaft boots.  
The front skid plate (front carry pipe) (3) protects the frame and front lower arm.

Check the engine guard, rear guards and front skid plate (front carry pipe) for cracks, damage or looseness at intervals shown in the Maintenance Schedule.

Have the engine guard, rear guards and front skid plate (front carry pipe) replaced if they are cracked or damaged. If the engine guard, rear guards and front skid plate (front carry pipe) bolts are loose, tighten them securely.

### 140 Servicing Your Honda

