

DESCRIPTION

PARTS LOCATION

- (1) Fuel tank cap
- (2) Engine stop switch
- (3) Fuel valve
- (4) Choke lever
- (5) Gearshift pedal
- (6) Recoil starter
- (7) Neutral indicator

