


Speed Limiter

The speed limiter is a screw installed in the throttle control case. This limiter is for beginning riders.

After the rider becomes proficient, the speed limiter can be removed by loosening the lock nut (1) and removing the speed limiter screw (2). After removing the speed limiter, plug the hole with the screw that was supplied with the TRX 70.

WARNING

* *Failure to plug the hole after removing the speed limiter screw will allow dirt to enter, and may cause the throttle to stick open.*

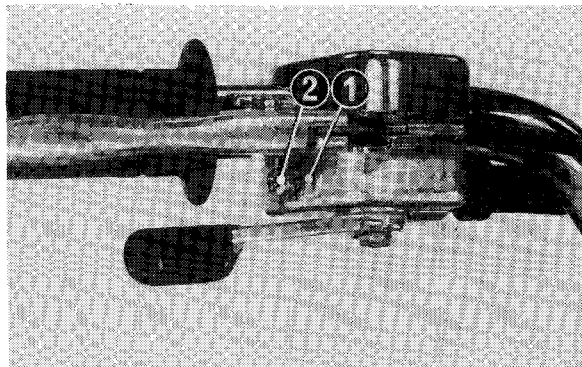

(1) Lock nut

(2) Speed limiter screw