


THROTTLE CABLE

Inspect throttle cable condition and operation. Replace the cable if it has become worn or kinked. Lubricate the cable with a commercially available cable lubricant to prevent premature wear or corrosion. Free play, measured at the tip of the throttle lever (1), should be maintained at 5–10 mm (3/16–3/8 in).

Adjustment can be made with the adjuster (2) on the throttle lever housing. Loosen the lock nut (3) and turn the adjuster.

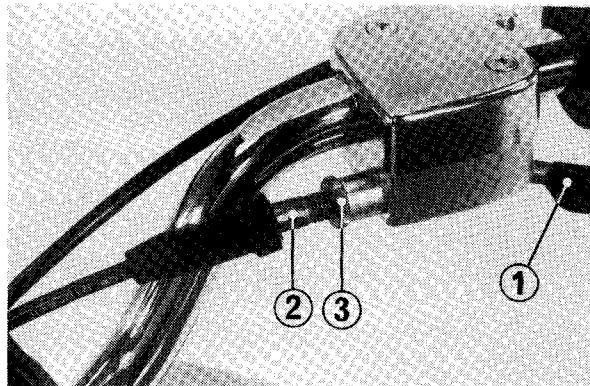

(1) Throttle lever

(2) Adjuster

(3) Lock nut