


If wheel removal is required when transporting, follow this procedure.

**Removal:**

1. Place a support block under the vehicle and raise the front and rear wheels off the ground.
2. Loosen the wheel bolts (1) with a 12 mm socket wrench.
3. Remove the wheels.

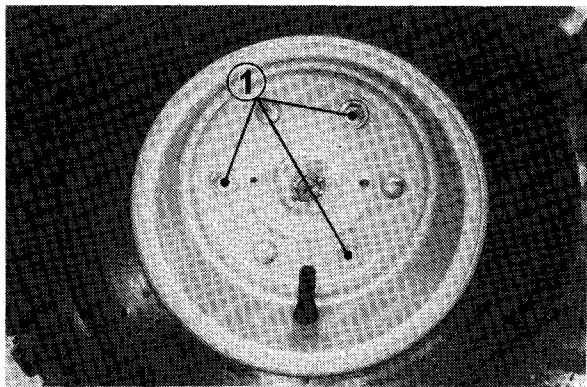

(1) Wheel bolts

**Installation:**

Reinstall the front and rear wheels and tighten the wheel bolts (1) in a cross-pattern, torquing them to 24–30 N·m (2.4–3.0 kg·m, 17–22 ft·lb).



***\* If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.***