

## Recoil Starter

The recoil starter (Fig. 2-8) is on the left side of the Sportrax. It is used to start the engine.

To operate the recoil starter:

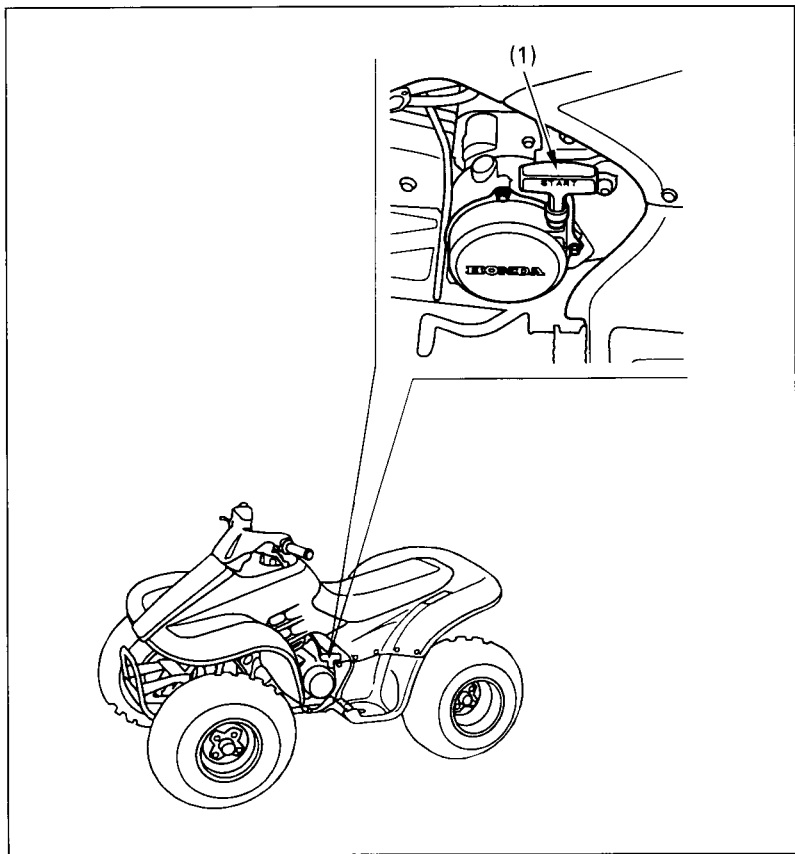


Fig. 2-8

(1) Recoil starter grip