

2. Fuel.

Fill the fuel tank when necessary (page 116).

Check for leaks.

Fuel level should be below the filler neck.

