

	FREQUENCY	ITEMS	Which ever comes first ⇒	INITIAL	REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL		
				mi	600	1200	
				km	1000	2000	
NOTE	HOURS	20	100	200			
NON EMISSION RELATED ITEMS		DRIVE CHAIN	(NOTE1,2)	I,L	I,L: EVERY 300mi (500 Km) or 50 operating hours		132--134
		DRIVE CHAIN SLIDER			I	I	135
	*	BRAKE SHOE WEAR	(NOTE1)			I	141,145
		BRAKE SYSTEM		I	I	I	32-35 139-146
		SKID PLATES			I	I	153
	*	CLUTCH SYSTEM		I	I	I	138
	*	SUSPENSION			I	I	-
	*	SPARK ARRESTER			C	C	154,155
	*	NUTS, BOLTS, FASTENERS		I		I	-
	**	WHEELS/TIRES		I	I	I	148-152
	**	STEERING SHAFT HOLDER BEARINGS				I	-
**	STEERING SYSTEM				I	-	

* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda service manual.

** In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

NOTES: 1. Service more frequently if the ATV is ridden in dusty areas, sand or snow.
2. Service more frequently if the ATV is ridden in very wet or muddy conditions.