

To adjust the free play, turn the brake lever adjusting nut (Fig. 4-18), located under the front fender.

Make sure the cut-out on the adjusting nut is properly seated on the brake arm pin (2).

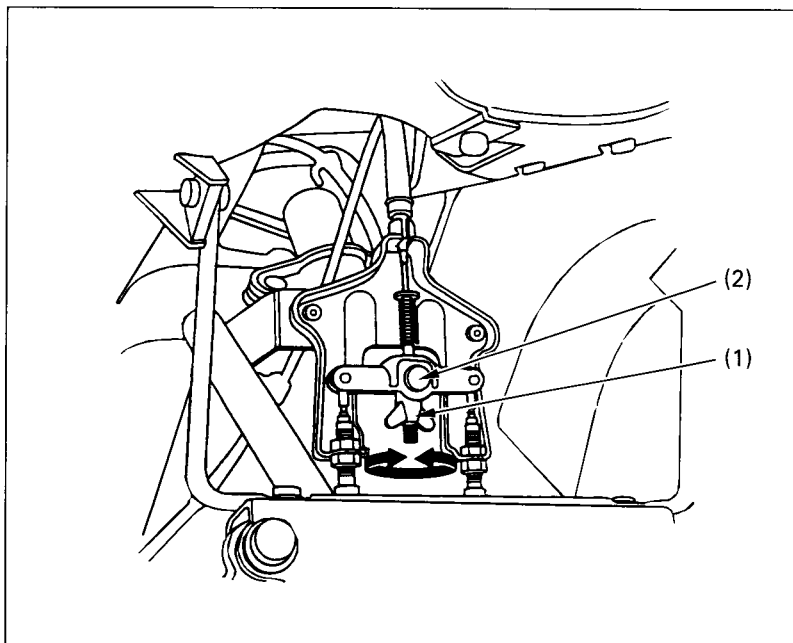


Fig. 4-18 (1) Brake lever adjusting nut

(2) Brake arm pin