

Starting & Stopping the Engine


Starting Procedure

To restart a warm engine, follow the procedure for “*High Air Temperature.*”

Normal Air Temperature 10° – 35°C (50° – 95°F)

1. Pull the choke lever up all the way to fully ON (A).
2. Open the throttle slightly (1/8 – 1/4).
(If the throttle limiter is adjusted as delivered, open the throttle fully.)

RIGHT SIDE

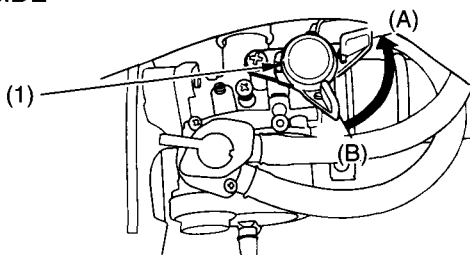

(1) choke lever

RIGHT HANDLEBAR

