

Starting & Stopping the Engine

High Air Temperature 35°C (95°F) or above

1. Do not use the choke.
2. Start the engine (follow steps 2–4 under *Normal Air Temperature*).

Low Air Temperature 10°C (50°F) or below

1. Follow steps 1 –2 under *Normal Air Temperature*.
2. Warm up the engine by opening and closing the throttle slightly.
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever is fully OFF.

NOTICE

Extended use of the choke may impair piston and cylinder wall lubrication and shorten the life of the engine.