

# Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	km	100	600	1200	
			↔		150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		DRIVE CHAIN	NOTE 1, NOTE 2		I, L	I, L EVERY 300mi (500km) or 50 operating hours		134
		DRIVE CHAIN SLIDER				I	I	136
	*	BRAKE SHOE WEAR	NOTE 1				I	123
		BRAKE SYSTEM			I	I	I	118
		SKID PLATES				I	I	133
	*	CLUTCH SYSTEM			I	I	I	111
	*	SUSPENSION				I	I	—
	*	SPARK ARRESTER				C	C	117
	*	NUTS, BOLTS, FASTENERS			I		I	—
	**	WHEELS/TIRES			I	I	I	—
	**	STEERING SHAFT HOLDER BEARINGS					I	—
	**	STEERING SYSTEM					I	—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 182).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.