

Brakes


Brake Shoe Wear

Refer to *Safety Precautions* on page 84 .


The front and rear brake are equipped with external brake wear indicators that lets you check brake wear without disassembly. Application of the brake control (lever or pedal) causes the arrow on the brake arm to move toward a reference mark on the brake panel.

RIGHT FRONT

LEFT FRONT

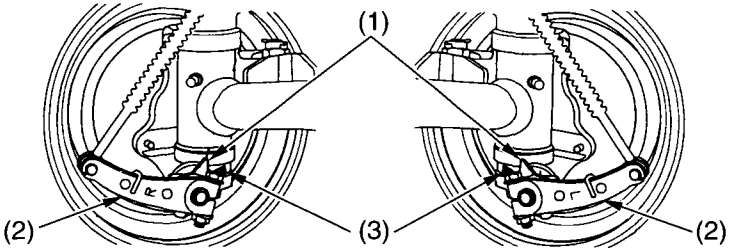

RIGHT REAR

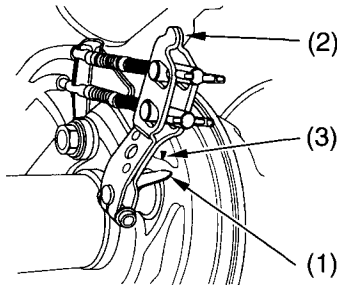

(1) arrow
(2) brake arm

(3) reference mark