

# Fuel

---

1. To open the fuel fill cap ( 1 ), turn it counterclockwise.
2. Pull the breather tube ( 2 ) out of the handlebar cover hole ( 3 ).
3. Add fuel until the level reaches the bottom of the filler neck ( 4 ).  
Avoid over filling the tank. There should be no fuel in the filler neck.

## **WARNING**

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

4. After refueling, turn the fuel fill cap clockwise until it clicks.
5. Insert the breather tube ( 2 ) into the handlebar cover hole ( 3 ).
6. If the fuel valve was set to RES, turn the fuel valve ON.

If you replace the fuel fill cap, use only a genuine Honda replacement part.