


Operation Component Locations

rear brake lever/parking brake lever

ignition switch

parking brake lock lever

front brake lever

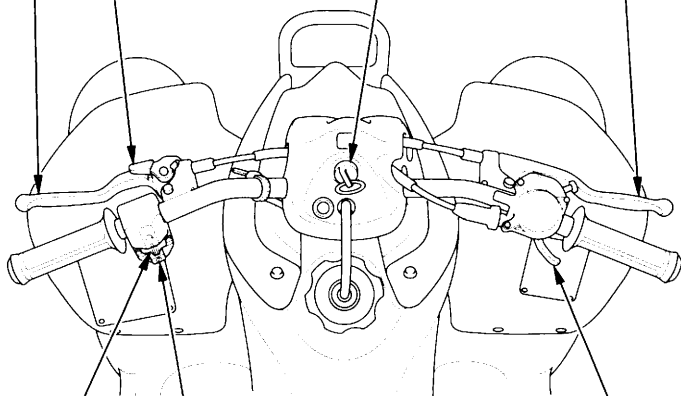

engine stop
switch

start button

throttle lever