



Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 185).

For information about carburetor adjustment for riding at high altitude, see page 186.

Safe Riding Precautions	45
Speed Restrictors for New Riders	45
Off-road Use Only	49
Keep Hands and Feet on Controls.....	50
Control Speed.....	51
Use Care on Unfamiliar or Rough Terrain.....	52
Do Not Perform Stunts.....	54
Ride Only When Visibility Is Good.....	54
Starting & Stopping the Engine	55
Preparation	55
Starting Procedure.....	56
Flooded Engine	59
How to Stop the Engine	59
Shifting Gears	60

(cont'd)

