

Operation Component Locations

rear brake lever/parking brake lever

ignition switch

parking brake lock lever

front brake lever

engine stop
switch

start button

throttle lever

22 Indicators & Controls