

 
 
# Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to *Break-in Guidelines* (page 194).

For information about carburetor adjustment for riding at high altitude, see page 195.

Safe Riding Precautions .....	53
Speed Restrictors for New Riders.....	53
Off-road Use Only.....	57
Keep Hands and Feet on Controls.....	58
Riding Position & Safety Equipment .....	59
Moving the ATV without Starting the Engine .....	60
Control Speed .....	61
Use Care on Unfamiliar or Rough Terrain .....	62
Do Not Perform Stunts.....	64
Ride Only When Visibility Is Good .....	64
Starting & Stopping the Engine.....	65
Preparation.....	65
Starting Procedure.....	66
Flooded Engine.....	69
How to Stop the Engine.....	69
Shifting Gears.....	70



(cont'd)

