

Engine Oil

Changing Engine Oil


Refer to *Safety Precautions* on page 94.

This procedure requires mechanical skill and professional tools such as a torque wrench, as well as a means for disposing of the drained fluid (page 170). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. With the ATV on the level ground, remove the oil fill cap/dipstick from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).

UNDER ENGINE

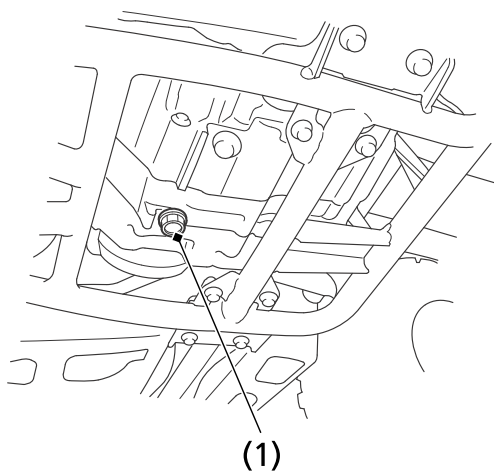

(1) oil drain plug

(cont'd)

Servicing Your Honda 113