



If You Have a Flat Tyre

Installation

1. Position the wheel.
2. Position the wheel nuts.
3. Hand-tighten the wheel nuts on the wheel, then lower the ATV to the ground before tightening the nuts in a crisscross (rather than circular) pattern to the specified torque:
54 N·m (5.5 kgf·m , 40 lbf·ft)

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

