


## If a Fuse Blows

All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check the fuse before looking elsewhere for another possible cause of the problem. Replace a blown fuse and check component operation.

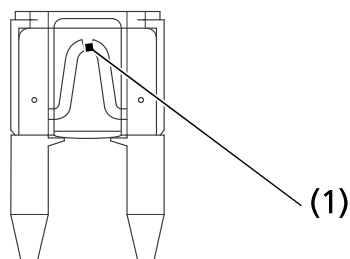

(1) blown fuse

The fuse is located next to the air cleaner case cover behind the seat.

### Recommended Fuse

main fuse	7.5 A
-----------	-------

## 180 Taking Care of the Unexpected