

If a Fuse Blows

4. Replace the old fuse.

 
 
If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

6. Reinstall the fuse case cover.

7. Install the seat.



182 Taking Care of the Unexpected

