

**When the 1st (E) segment of the fuel gauge is flashed**

Available driving distance is displayed. Then the amount of remaining fuel, current fuel mileage, average fuel mileage, current fuel mileage, no indication and available driving distance can be selected to press the **FCD** button.

