


Indication mode change of current fuel mileage and average fuel mileage

Except E type

Press and hold **FCD** button to switch between "km/L" or "L/100 km".

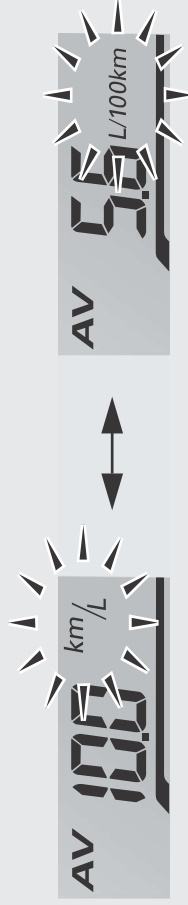

Current fuel mileage

Current fuel mileage shows the current, or instant fuel mileage you are getting.

When your motorcycle speed is 5 km/h (3 mph) or below, " - - . - " is displayed.

Average fuel mileage

The average fuel mileage is based on the each tripmeter A and tripmeter B. The average fuel mileage since tripmeter was reset. When " - - . - " is displayed, see your dealer for service.

Average fuel mileage is also reset when the tripmeter is reset. **➡P.23**