

3. Install the new clutch oil filter with the rubber seal facing in, toward the engine. You will see "IN-SIDE" mark on the clutch oil filter body, near the seal.
4. Replace the O-ring and apply a thin coat of engine oil to the new O-ring when before installing it.
5. Install the spring and the clutch oil filter cover.
6. Install the clutch oil filter bolts A, B and tighten.
7. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.
➤ P. 70
8. Install a new engine oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 29 N·m (3.0 kgf·m, 21 lbf·ft).

10. Fill the crankcase with the recommended oil (➤ P. 57) and install the oil fill cap.

Required oil

When changing oil, engine oil filter & clutch oil filter: engine oil filter:

4.0 litres (4.2 US qt, 3.5 Imp qt)

11. Check the oil level. ➤ P. 68
12. Check that there are no oil leaks.
13. Install the right engine heat guard and right under cowl.