

<b>Ref. No.</b>	<b>Description</b>	<b>Function</b>
10	Neutral indicator (green)	Lights when the transmission is in neutral.
11	Coolant temperature gauge	Shows coolant temperature (see page 13).
12	Fuel gauge	Shows approximate fuel supply available (see page 14).
13	Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob