## WINDSHIELD HEIGHT ADJUSTMENT

The windshield (1) height can be adjusted up or down slightly to suit your riding preference height.



(1) Windshield

## To adjust:

<Up>


Move the windshield up.

<Down>

Pull the both knobs (2) back and move the windshield down.

## **A**WARNING

\* Do not move the windshield while riding the motorcycle.

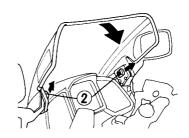

(2) Knobs