

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			x 1,000 km	1	6	12	18	24	30	36	
			x 1,000 mi	0.6	4	8	12	16	20	24	
		MONTH		6	12	18	24	30	36		
DRIVE CHAIN			I,L, EVERY 1,000 km (600 mi)								65-69
BATTERY				I	I	I	I	I	I	80-82	
BRAKE FLUID	(NOTE 4)			I	I	R	I	I	R	19-22	
BRAKE PADS WEAR				I	I	I	I	I	I	79	
BRAKE SYSTEM			I		I		I		I	19-22	
* BRAKE LIGHT SWITCH					I		I		I	85	
* HEADLIGHT AIM					I		I		I	-	
CLUTCH SYSTEM					I		I		I	22-23	
CLUTCH FLUID	(NOTE 4)			I	I	R	I	I	R	22	
SIDE STAND					I		I		I	71	
* SUSPENSION					I		I		I	70	
* NUTS, BOLTS, FASTENERS			I		I		I		I	-	
** WHEELS/TYRES					I		I		I	-	
** STEERING HEAD BEARINGS			I		I		I		I	-	

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA service manual.

** In the interest of safety, we recommend these items be serviced ONLY by an authorized HONDA dealer.

NOTES:

1. For higher odometer reading, repeat at the frequency interval established here.
2. Service more frequently when riding in dusty areas.
3. Replace every 36,000 km (24,000 mile) or every 2 year whichever comes first.
4. Replace every 18,000 km (12,000 mile) or every 2 year whichever comes first.