

FUSE REPLACEMENT

(Refer to maintenance precautions on page 56). The main fuse (1), located near the negative (-) terminal lead behind the left side cover, is 30 A. The spare main fuse (2) is located near the negative (-) terminal lead.

The fuse box (4) is located inside of the right side fairing (5). The specified fuses are 10 A and 15 A.


When frequent fuse failure occurs, it usually in-

dicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.


CAUTION:

* **Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the seat (page 39), disconnect the wire connector (3) of the stator magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

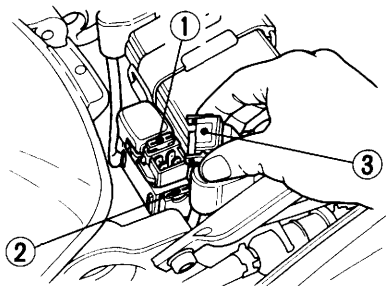

- (1) Main fuse
(2) Spare main fuse
(3) Wire connector

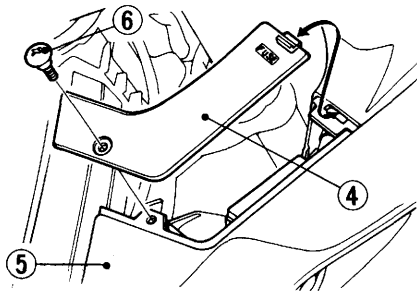

- (4) Right inner panel
(5) Right side fairing
(6) Screw