


1. To remove the spark plug from the rear cylinder, remove the tank stay mounting bolt (3) and nut (4).

Lift the tank slightly and insert the shorter maintenance plug bar (5) into hole in the tank and longer one into the hole in the frame as shown in the drawing.


2. Remove the spark plug cap (2) from the spark plug, and remove the spark plug using the special plug wrench (1) furnished in the tool kit.

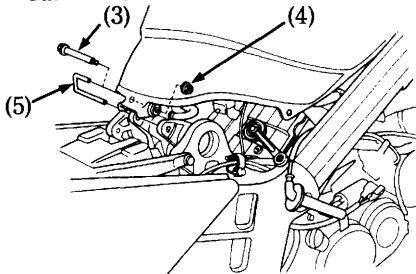

- (3) Tank stay mounting bolt
- (4) Tank stay mounting nut
- (5) Maintenance plug bar

3. To remove the plug from the front cylinder, remove the right and left middle fairings (page 43) and unscrew the mounting bolt (7) attaching the bottom of the radiator (6) and separate the oil hose (8) from the radiator clamps (9).

4. Raise the radiator and remove the spark plug with the plug wrench.

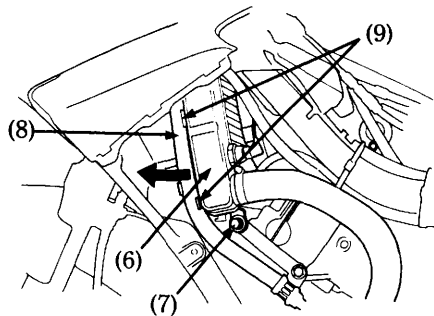

- (6) Radiator
- (7) Mounting bolt
- (8) Oil hose
- (9) Clamps