


To replace fuses behind the right inner panel (4), remove the right inner panel by removing the screw (6) and open the fuse box cover (7).

Pull the old fuse out of the clips. Push a new fuse into the clips and close the fuse box cover.


The spare fuses (8) are located in the fuse box. Install the right inner panel.

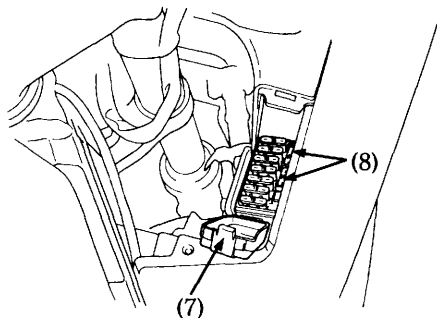

(7) Fuse box cover (8) Spare fuses

▲ WARNING

*** Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

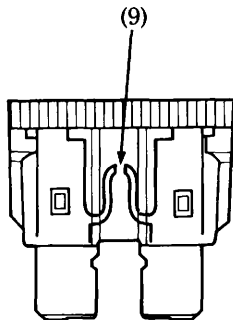

(9) Blown fuse