

SPARK PLUGS

(Refer to the maintenance precautions on page 61).

Recommended plugs:

Standard:

CR9EH-9 (NGK) or


U27FER-9 (NIPPONDENSO)

For cold climate: (Below 5°C, 41°F)

CR8EH-9 (NGK) or

U24FER-9 (NIPPONDENSO)

1. To remove the spark plug from the rear cylinder, remove the side cover (page 44).
2. Remove the spark plug cap (1) from the spark plug, and remove the spark plug using the special plug wrench (2) furnished in the tool kit.

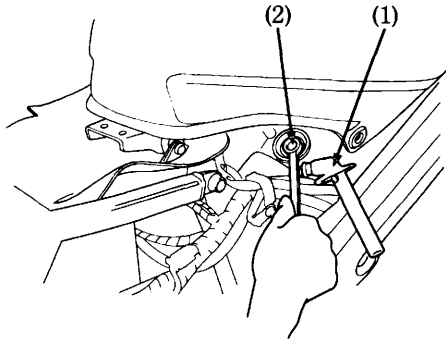

- (1) Spark plug cap
(2) Spark plug wrench